
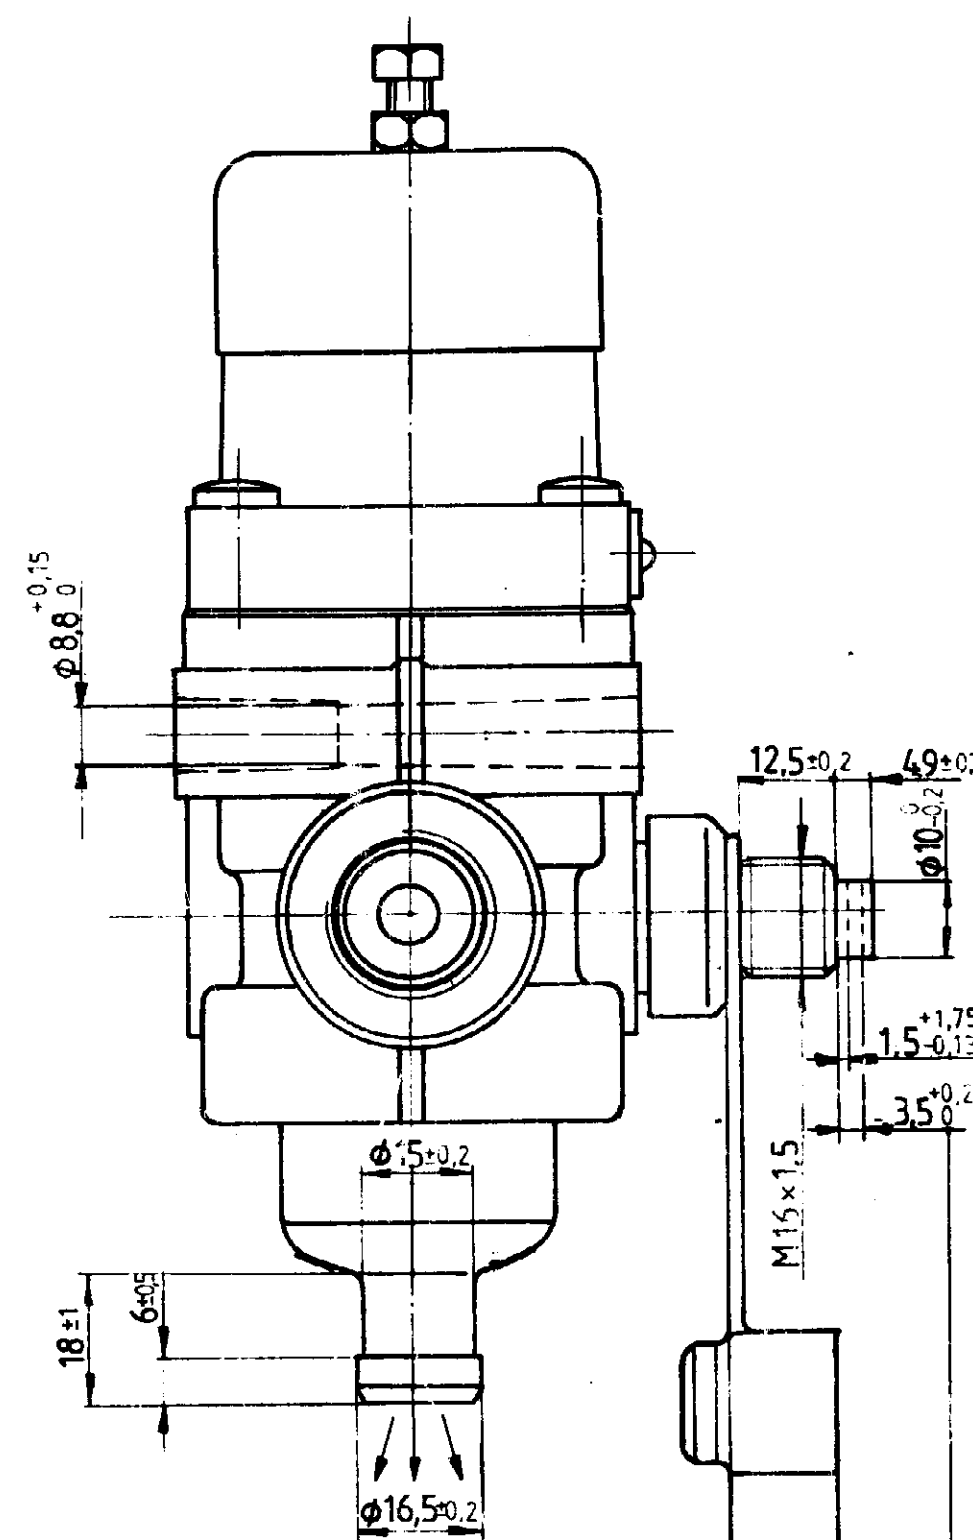


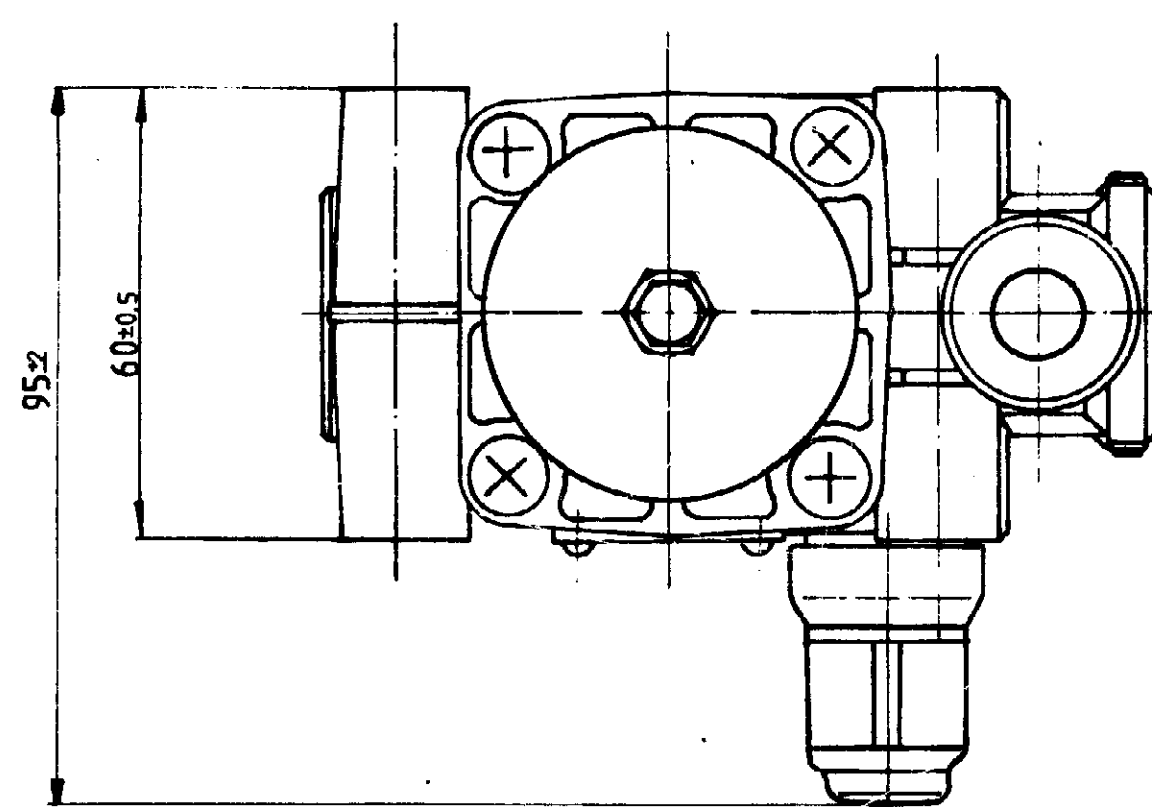


POSITION OF VALVE STEM FOR TIRE INFLATING
STÖESSELSTELLUNG FÜR REIFENFUELLEN
POSITION DU POUSOIR POUR GONFLAGE DES PNEUS
POSIZIONE DELLO STELO PER GONFIAGGIO PNEUMATICI

1= SUPPLY OF ENERGY
ENERGIEZUFLUSS
ALIMENTATION D'ENERGIE
ALIMENTAZIONE DI ENERGIA

21= DELIVERY OF ENERGY
ENERGIEABFLUSS
UTILISATION D'ENERGIE
UTILIZZAZIONE DI ENERGIA

3= EXHAUST FOR COMPRESSOR IDLING
ENTLUEFTUNG BEI LEERLAUF
ECHAPPEMENT POUR MARCHE A VIDE DU COMPRESSEUR
SCARICO PER MARCIA A FOLLE DEL COMPRESSORE

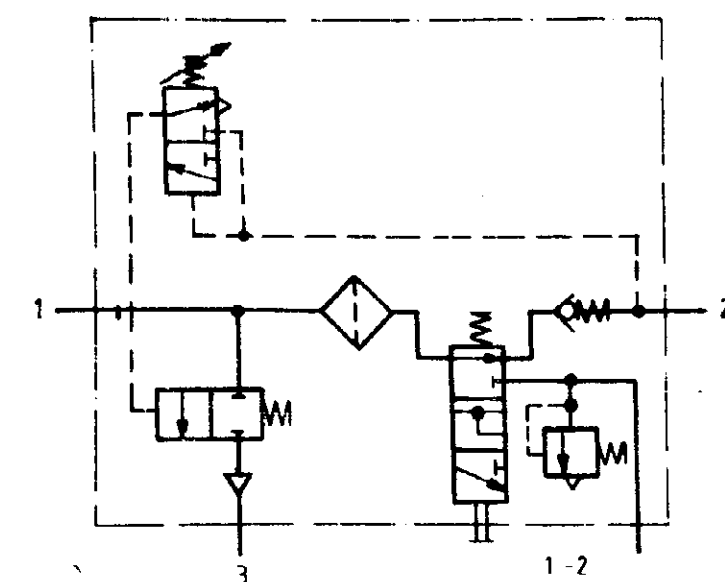

PRESSURE SETTING RANGE :
SCHALTSPANNE : 0,6 $^{+0,4}_{0}$ bar
PLAGE DE REGULATION :
GAMMA DI REGOLAZIONE :

INSTALLATION POSITION AS DRAWN
EINBAULAGE WIE GEZEICHNET
POSITION D'INSTALLATION SUIVANT DE SSIN
POSIZIONE DI MONTAGGIO COME DISEGNATO

[illegible]